

MANUAL

PARRILLA GRILL

By BIOKAN GP



PLEASE READ ALL THE INSTRUCTIONS IN THIS MANUAL THOROUGHLY BEFORE INSTALLING AND OPERATING THE PARRILLA GRILL.

RETAIN IT FOR FUTURE REFERENCE.

IMPORTANT

The present manual will help you use the product safely.

- Read all instructions before installing and using the equipment.
- · Save these instructions.
- Keep the manual within reach for future reference.
- The pictures, technical drawings and general information in this manual might have been modified since its first edition.

When this rotisserie is not properly installed, a fire may result. To reduce risk of fire, follow the installation instructions.

Please read this manual carefully before you install the Parrilla Grill.

Failure to follow instructions may result in property damage, body injury or death.





Since 1988 KOZANI, GREECE

WELCOME TO BIOKAN Inc.

Our company, BIOKAN GP was founded in 1988 and is headquartered in Kozani, Greece. Since then, we have been manufacturing stainless steel constructions for restaurants and other food service establishments.

Over the past few years, we have specialized in manufacturing commercial kitcen exhaust hoods, charcoal ovens and rotisseries with great success. What led us to this success is the know-how and our experienced staff as well as our avant-garde machinery. We boast one of the most technologically advanced production lines of stainless-steel constructions in Greece.

As a result, we manufacture high quality products, which combine modern design with functionality, to the most competitive prices.

We manufacture and offer to our clients a large product line of stainless-steel commercial kitchen equipment, such as exhaust hoods, charcoal ovens, wood/gas pizza ovens, charcoal rotisseries and grills. We also offer consulting services, regarding the exhaust hood installation and the space disposal of the professional equipment in commercial kitchens.

BIOKAN believes in continuous improvement. Our engineers are constantly developing and redesigning products so that they can respond to our customers' needs. BIOKAN strives to construct products that are more efficient, easier to install and maintain, and products that meet the highest standards.

Our Vision is to continue being a customer centric business which has determined our

development, commercial expansion, and strategy since our foundation and to keep providing our clients with high quality products and services to fair prices.

As a result, we have established long-term and fruitful business relations with the

companies we have cooperated for the past few years. We always offer to our clients the best pre-sales and after - sales support.

CONTENTS

1. BEFORE USING PARRILLA GRILL 1.1. Before Using Parrilla Grill5 2. ROASTER PARRILLA MODELS 2.3 Drawings9 3. COMPONENTS 4. INSTALLATION INSTRUCTIONS 4.1 Warnings13 **5. CLEANING AND MAINTENANCE** 5.1 Cleaning14 6. WARRANTY 6.1 Warranty16 7. CONTACT DETAILS

1.1 BEFORE USING THE PARRILLA GRILL-



Place the Parrilla grill on a hard level, non-combustible, stable surface (concrete, ground, etc.), which can support the weight of the grill. Never place the grill on wooden or other combustible surfaces.



The Parrilla grill is hot when in use. To avoid burns wear protective gloves or oven mitts.



DO NOT touch any surface of the Parilla grill, as the surfaces are at high temperature.



DO NOT attempt to move the Parrilla grill when it is in use. Do NOT clean the Parrilla while it is still hot.



Place the Parrilla grill on a surface which is NOT accessible to children and pets. Close supervision is necessary when the grill is in use.



Never leave burning charcoal or ashes in the Parrilla grill unattended. Before the grill can be left unattended, the remaining charcoal/wood and the ashes must be removed. Do NOT pour ashes into flammable or thermo deformable buckets made from materials like plastic, rubber, wood or similar.

1.1 BEFORE USING THE PARRILLA GRILL -



Store the unit in a safe and dry place. Rain or adverse weather conditions may damage the Parrilla grill.



Do NOT put off the fire by throwing water in the grill.



Do NOT throw the charcoal into the Parrilla grill but place them gently.



DO NOT store lighter fluid and other flammable liquids or materials under the Parrilla. Put any flammable material at least 30 cm away from the sides or the top of the grill.



DO NOT use gasoline, kerosene or alcohol to fire up the charcoal. Using any of these or similar products could cause an explosion and possibly lead to severe injury.



DO NOT install this appliance in any area where it may be affected by any adverse conditions such as steam, grease, dripping water, high temperatures, or any other adverse conditions.



Respect the frequency and guidelines of maintenance and cleaning recommended by BIOKAN GP in this manual.



When this equipment is not properly installed, a fire may result. To reduce risk of fire, follow the installation instructions.



BIOKAN GP will not be responsible of any damages caused to people, parts or installations due to improper use or maintenance of the Parrilla Grill.



The legislation of the country and town, where the equipment is going to be installed, must be checked since norms and regulations may ask for further safety measures than the ones exposed in this manual

GP95 Counter-top: Roasting Area 800x600 mm



GP95C Cabinet: Roasting Area 800x600 mm



TECHNICAL INFORMATION GP95

Roasting area	800X600 mm
Fire up time	30 min average
Charcoal daily consumption*	Charcoal 16 – 20 kg
Broiling temperature	200 °C to 250 °C
Exhaust rate	2.500 m3/h
Net weight	100 kg

TECHNICAL INFORMATION GP95C

Roasting area	800X600 mm
Fire up time	30 min average
Charcoal daily consumption*	Charcoal 16 – 20 kg
Broiling temperature	200 °C to 250 °C
Exhaust rate	2.500 m3/h
Net weight	140 kg

INSTALLATION

Clearance with non-flammable equipment	100 mm
Clearance with flammable equipment	300 mm

INCLUDED ACCESSORIES

1 Removable upper rack 800x350 mm

2 Stainless steel grill racks "V"

Front drip pan

Ash collector drawer

Firebricks

Charcoal starter

Poker

Grill scraper

Charcoal shovel


OPTIONAL ACCESSORIES


Extra grill racks (Rod grill grate/ "V" grill grate / "Z" grill grate)


* The quantity of the charcoal consumption depends on the cooking duration and the quality of the charcoal used.

For the firing-up procedure 8-10 kg of charcoal is needed. The Parrilla grill must be reloaded with approximately 4kg of charcoal every 2 hours.

DIMENSIONS (mm):

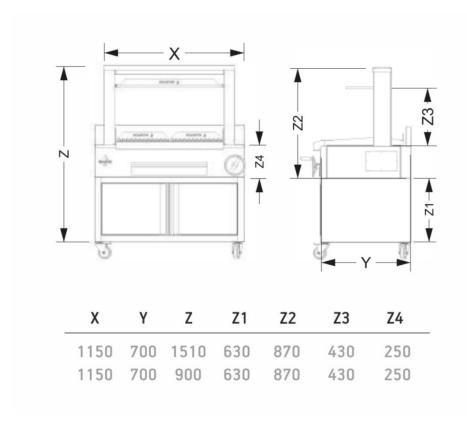

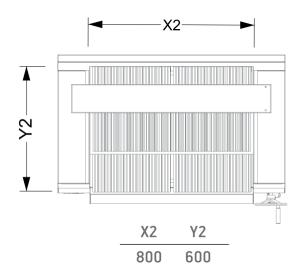

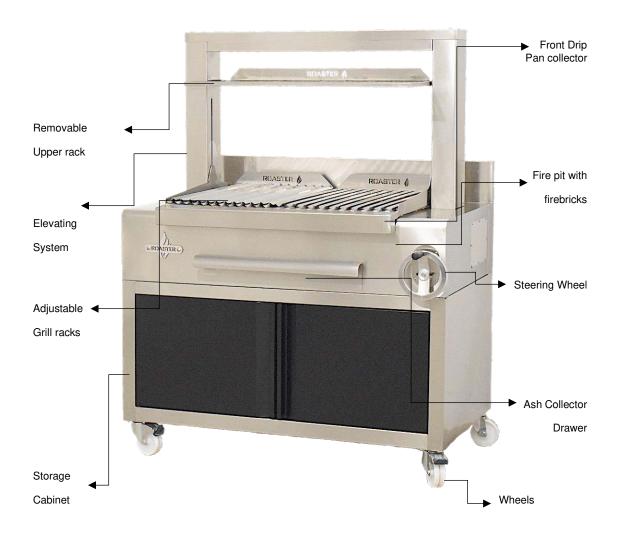

	DESCRIPTION	CODE
SAUTH STATES	"V" grill grate	GRV
	Removable Upper rack	PRLSH
	Steering Wheel	SWP
	Wheels	CGA12
	Fire bricks	FBRK
	Ash Collector Drawer	PACD1
	Cabinet	PRLC
	Charcoal grate	CHG
	Removable drip pan collector	RGP2

DESCRIPTION	CODE
"Z" grill grate	GRZ
Rod grill grate	GRR
Charcoal Starter	CHST
Poker	РОК
Ash Shovel	CSH
Grill scraper	GSC



Before firing-up the Parrilla grill for the first time, remember to remove all the plastics that are covering the exterior of the rotisserie.



This product may have been dispatched in more than one packages. Check that all items and accessories have been received as ordered. Keep all instructions/manuals.



Do NOT use flammable liquids to fire-up the charcoal. Only use charcoal as fuel for the grill.



DO NOT place any obstructions that may block the access for the maintenance or the service of the Parrilla grill. DO NOT modify or damage the legs of the Parrilla grill.



Always place the Parrilla grill under an exhaust hood.



In all the installation options, it is important to keep the components of the hood clean (see Chapter 5, Cleaning and maintenance).



You must fire-up the Parrilla grill before starting roasting. All the firing-up process must be done without any accessories on the Parrilla grill.



Place the Parrilla grill at a distance of at least 100 mm away from the wall or any other cooking appliance.



Perform the operations when the grill is cold to avoid burns.



Do NOT use chemical products to clean the grill.



Do NOT pour ashes into flammable or thermo deformable recipients made from materials like plastic, rubber, wood or similar.



DO NOT splash water directly into the grill and DO NOT use any water or any kind of liquid.



Clean with e grease remover and a cloth or brush.

- ✓ It is necessary to clean the grill racks and the other roasting accessories after every use.
- ✓ Remove the grill racks and wash them with a grease remover and a brush or cloth.
- ✓ Do NOT use a corrosive grease remover to clean the outside of the grill.
- ✓ Clean the exterior casing of the grill with a grease remover and a cloth.
- Remove the ash collector drawer and clean it with a grease remover and a brush. CAUTION! Ashes must be placed in a metal container which should be placed on a non-combustible surface or on the ground, away from combustible materials, until their final disposal.
- ✓ The fire grates should be cleaned twice a month with a wire brush. Change the
 position of the fire grates every time you clean them; turn them upside down and put
 the ones of the middle to the sides, and the ones of the sides in the middle.

 CAUTION! DO NOT use water.



Make sure that the grill is cold before performing any maintenance operation.



Wear protective gloves or oven mitts.



It is forbidden to perform any modification to the equipment unless it has been approved by BIOKAN GP before.



Do NOT use pieces or parts of other companies.



BIOKAN Inc. will not be responsible of damages provoked to people, parts or installations caused by an improper use or maintenance of the Parrilla grill.



All inspections must be carried out by qualified personnel.



BIOKAN GP guarantees ONE-year warranty from the purchase date of this product, against any defect in the materials and the components used during its fabrication. components used during its fabrication.

THIS WARRANTY WILL NOT BE VALID UNDER THE FOLLOWING CIRCUMSTANCES

- 1. When the Buyer or the End user do not follow strictly the instructions of use in this manual.
- 2. When the product has been misused, damaged, or exposed to any liquid or corrosive substance or for any other faults attributable to the Buyer or End user.
- 4. When the product has been modified or repaired by non-qualified personnel.
- 5. When the fault is due to the normal wearing out of the rotisserie and its parts due to long term use.
- 6. When the damage is caused by liquids, chemicals or products that should not be poured inside the oven.

NOTES:

- Repair or substitution is possible only when a product was originally defective (at the time of delivery).
- The Buyer or the End user is responsible for any damage caused due to wrong or improper use.
- The Buyer should inspect the products immediately after the delivery and any complaints or arguments must be sent to our company within five (5) business days.
- The risk of loss, destruction, or damage of the product during the shipping is the Buyer's or carrier's responsibility, even if the shipping order has been given by our Company at the request of the Buyer.
- All repairs during the guarantee periods of 12 months, are performed in our factory in Greece.
- The Buyer is responsible for the shipping of the products and covers exclusively the shipping cost.
- If the problem to be repaired is caused by an incorrect use or installation a charge will be applied, even if the product is in the warranty period.

No other warranty, verbal or written, different that the one expressed here will be accepted by BIOKAN GP.



CHARCOAL OVENS & GRILLS

By BIOKAN Inc.









- https://www.linkedin.com/company/biokan-oe
- https://www.youtube.com/channel/UCjOpxGWZamP7FVeQ2Dx45yA

FACTORY

2nd km. Kozanis – Neas Nikopolis, 50100, Kozani, GREECE
Tel.: +30 2461 0 36538

HEAD OFFICES

312 Syggrou Av, Kallithea, 17673, Athens, GREECE
Tel.: +30 21 0 2203458